









What to do if...
What to do if...

	A tire punctures	P. 532	If you have a flat tire
	The hybrid system does not start	P. 541	If the hybrid system will not start
		P. 101	Immobilizer system
		P. 547	If the vehicle 12-volt battery is discharged
	The engine coolant temperature warning light flashes or come on	P. 552	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 543	If you lose your keys
	The 12-volt battery runs out	P. 547	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 47	Smart access system with push-button start
		P. 58	Wireless remote control
		P. 61	Doors
	The horn begins to sound	P. 103	Alarm
	The vehicle is stuck in mud or sand	P. 556	If the vehicle becomes stuck
	A warning light or indicator light comes on	P. 502	If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 502



Charging system warning light

P. 502



High engine coolant temperature warning light

P. 503



Brake system warning light

P. 503



Malfunction indicator lamp

or



P. 503



SRS warning light

P. 503



"ABS" warning light

or



P. 503



Electric power steering system warning light

P. 504



"PCS" warning light*²

P. 504



"AFS OFF" indicator light*²

P. 504



Slip indicator light*¹

P. 504



"LKA" indicator light*²

P. 504



Cruise control indicator light*²

P. 504



Radar cruise control indicator light*²

P. 504



Automatic High Beam indicator light*²

P. 505



Open door warning light

P. 505



Low fuel level warning light

P. 505



Driver's seat belt reminder light

P. 505



Front passenger's seat belt reminder light

P. 505



Master warning light

P. 505



Tire pressure warning light

P. 506

*¹: Slip indicator comes on.

*²: The light flashes to indicate a malfunction.